

Montagehandleiding SMA-10 TA








The clamp must be placed between the copper-foil and the braid.





Our coax cable scissors cut the center conductor in a way that its structure does not change. You can easily put the center pin onto the cable.

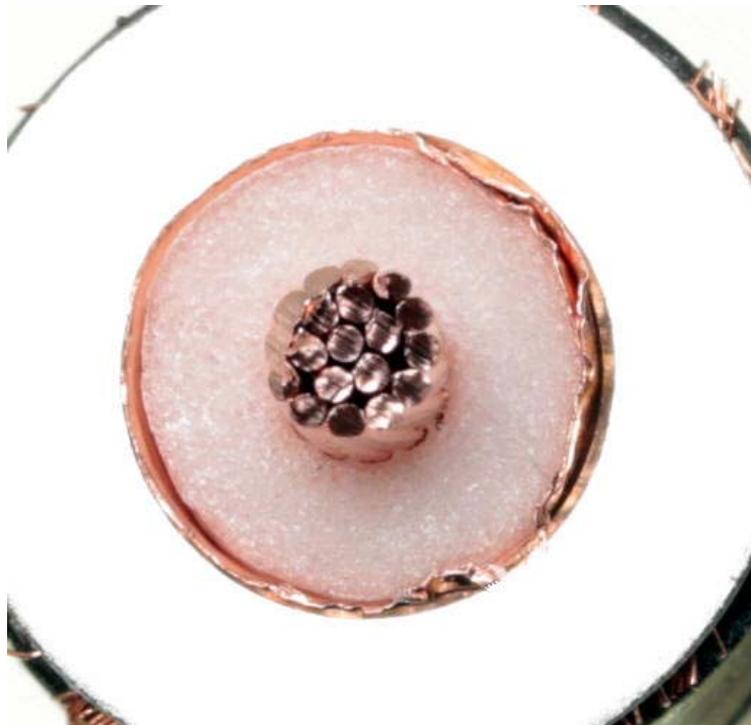



Please, do never forget to check, if there is a short-circuit!

